


DATA SHEET OXY-LC

Oxygen Sensor Interface Board

FEATURES

- Provides the electronics necessary to power and control SST's range of zirconium dioxide (ZrO₂) sensors
- Built in pressure sensor for barometric pressure compensation
- Interface mounted screw terminals for easy wiring with reverse voltage and transient overvoltage



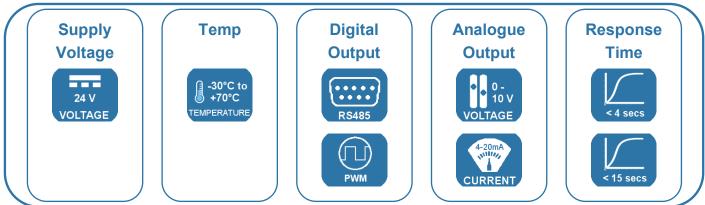

👼 BENEFITS

- Adaptive software filtering provides a fast sensor response coupled with a stable oxygen output
- High accuracy linear output

K TECHNICAL SPECIFICATIONS

Supply voltage

RS485 variant:		8—28V _{DC}
Analogue variants:		20-28V _{DC}
Supply current		600mA max. at $24V_{DC}$
		1.2A max. at 12V _{DC}
Digital output		RS485 (Modbus RTU)
	or	PWM
Analogue outp	ut	4—20mA; load 600Ω max
	or	$0-10V_{DC}$; load $10k\Omega$ min
Temperature li	mits	
Sto	rage:	-40°C to +85°C
Operating:		-30°C to +70°C
Operating pressure limits ¹		260—1260mbar absolute

OUTPUT VALUES

Oxygen range (analogue output)		0.1 ² —25% O ₂
	or	0.1 ² —100% O ₂
Oxygen range (Modbus RTU)		0.1 ² —100% O ₂
Accuracy after calibration ³		0.5% O ₂
Repeatability after calibration		0.5% O ₂
Output resolution		0.01% O ₂
Response time (step 10—90%)		
Fast response sensor connected:		4s
Standard response sensor connected	d:	15s
Initial warm up time (till stable output)		5—10mins
Output inactive start up delay (heater war	m up)	
From OFF to ON mode:		60s
From Standby to ON mode (RS485 o	nly):	20s



Sensor and interface for correct barometric pressure compensation.

Prolonged operation below 0.1% O_2 can damage the sensing element.

Analogue output variants accuracy stated is valid when calibrated at the default calibration value. RS485 variant accuracy stated is valid when calibrated at the default 20.7% O_2 over the range 0.1 to 25% O_2 . For maximum accuracy above 25% O_2 the interface and sensor should be calibrated to full scale of the required range using certified gas.


Apollosense Ltd

Shenzhen: Adress : Room 712, Huaneng Building, Shennan Zhong Road, Shenzhen 518031, China Tel : (86-755) 83680810 83680820 83680830 83680860 Fax : (86-755) 83680866 Hong Kong: Adress : Unit 1502, Hollywood Plaza, 610 Nathan Road, Mong Kok, Kln., H.K. Tel : (852) 2737 0903 Fax : (852) 2737 0938 Email : sales@apollounion.com



OUTLINE DRAWING AND MOUNTING INFORMATION

All dimensions shown in mm. Tolerances = ±1mm.

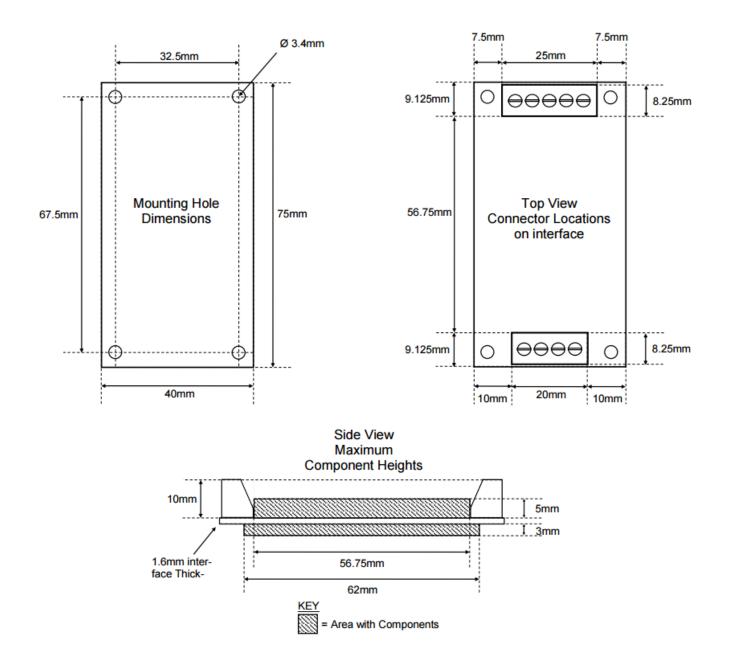


Apollosense Ltd

Hong Kong: Adress : Unit 1502, Hollywood Plaza, 610 Nathan Road, Mong Kok, Kln., H.K. Tel : (852) 2737 0903 Fax : (852) 2737 0938 Email : sales@apollounion.com

ELECTRICAL INTERFACE


Always handle the interface board using the correct ESD handling precautions.

RS485 Variant

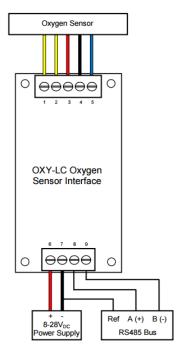

Pin	Assignment	
1	Sensor Heater + (1)	
2	Sensor Heater 0V _{DC} (2)	
3	Sensor Pump	
4	Sensor Common	
5	Sensor Sense	
6	8—28V _{DC}	
7	0V _{DC}	
8	RS485 A (+)	
9	RS485 B (-)	
	· · · · · · · · · · · · · · · · · · ·	

Comm. Setting	Default Value
Address	1
Baudrate	9600
Parity	None
Stopbits	1

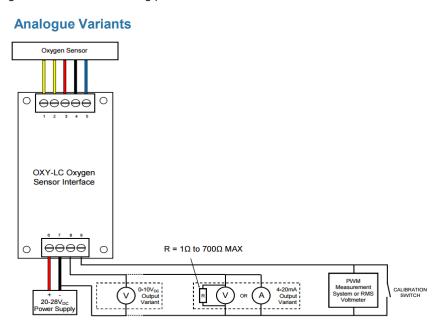

Pin	Assignment
1	Sensor Heater + (1)
2	Sensor Heater $0V_{DC}(2)$
3	Sensor Pump
4	Sensor Common
5	Sensor Sense
6	20—28V _{DC}
7	0V _{DC}
8	4—20mA or 0—10V _{DC}
9	Calibrate IN/PWM OUT

	Output Value			
O ₂ %	0—10V _{DC}		4—20%mA	
	0.1—25% O ₂	0.1—100% O ₂	0.1—25% O ₂	0.1—100% O ₂
20.7%	8.28V _{DC}	2.07V _{DC}	17.25mA	7.34mA
100%	-	10V _{DC}	-	20mA
90%	-	9.0V _{DC}	-	18.4mA
25%	10V _{DC}	2.5V _{DC}	20mA	8mA
5%	2.0V _{DC}	0.5V _{DC}	7.2mA	4.8mA
0.1%	0.04V _{DC}	0.01V _{DC}	4.06mA	4.02mA

Notes:

1. Output pins 1 through 5, refer to appropriate Apollo oxygen sensor datasheet for wiring/pin designations.

2. Every Apollo oxygen sensor has two heater connections which should be connected to pins 1 & 2 of the OXY-LC; the heater coil has no polarity. However when connecting to a sensor where the sensor housing is one of the heater connections, pin 2 of the OXY-LC should be connected to the housing.

Apollosense Ltd


Shenzhen: Adress : Room 712, Huaneng Building, Shennan Zhong Road, Shenzhen 518031, China Tel : (86-755) 83680810 83680820 83680830 83680860 Fax : (86-755) 83680866

Apollo

Generate your specific part number using the convention shown below. Use only those letters and numbers that correspond to the options you require — omit those you do not.

Digital Variant

O X Y - L C - 4 8 5

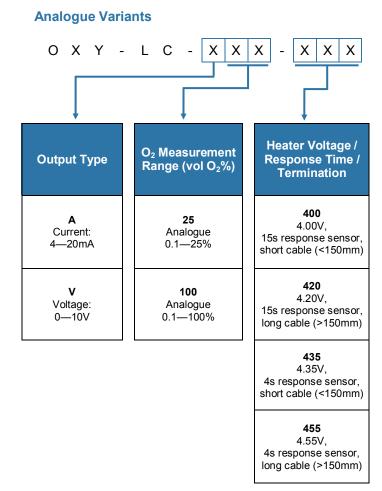

Zirconium dioxide sensors are damaged by the presence of silicone. Vapours (organic silicone compounds) from RTV rubbers and sealants are known to poison oxygen sensors and MUST be avoided. Do NOT use chemical cleaning agents. Failure to comply with these instructions may result in product damage.	CAUTION Do not exceed maximum ratings and ensure sensor(s) are operated in accordance with their requirements. Carefully follow all wiring instructions. Incorrect wiring can cause permanent damage to the device.	() INFORMATION As customer applications are outside of Apollosense Ltd.'s control, the information provided is given without legal responsibility. Customers should test under their own conditions to ensure that the equipment is suitable for their intended application. For detailed information on the sensor operation refer to application note
	are known to poison oxygen sensors and MUST be avoided.	AN0043 Operating Principle and Construction of Zirconium Dioxide Oxygen Sensors.

General Note: Apollosense Ltd. reserves the right to make changes to product specifications without notice or liability. All information is subject toApollosense Ltd.'s own data and considered accurate at time of going to print.

Apollosense Ltd

Shenzhen: Adress : Room 712, Huaneng Building, Shennan Zhong Road, Shenzhen 518031, China Tel : (86-755) 83680810 83680820 83680830 83680860 Fax : (86-755) 83680866 Hong Kong: Adress : Unit 1502, Hollywood Plaza, 610 Nathan Road, Mong Kok, Kln., H.K. Tel : (852) 2737 0903 Fax : (852) 2737 0938 Email : sales@apollounion.com